




Install the larger insert first in the end wall. Cut out for the diagonal braces in the corner.



Install the smaller insert in the side wall. Adhesive is used to adhere the foam to the container.

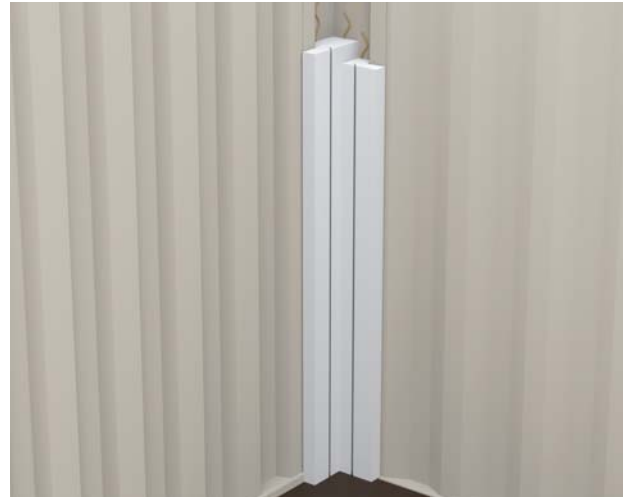

Press the metal insert into the grooves. If the metal is loose, use sprayfoam or duct tape to hold in place.



Butt the panels into the corner inserts leaving a gap to fill with spray foam.

The InSoFast Corner Post Inserts

- Provide a clean finished look without the need for additional sheet foam in the corners.
- Provide for solid attachment in the corners with the 24 gauge metal insert.
- Metal inserts accepts sharp point drywall screws.
- When using FP2.5 panels, additional 1/2" sheet foam will be necessary over top of the metal insert.

